

AGT Topo/DTM 22

COGO, CAD, and DTM software for Land Surveyors

by Emerald Data, Inc.

AGT Topo 22 Help

© 2007-2022 Emerald Data, Inc.

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Printed: April 2022

Table of Contents

Foreword	0
Part I Introduction	2
Part II What's New	5
Part III Installation	10
1 Requirements	10
2 Installation (Single user version)	10
3 Requesting an Activation Code	11
4 Activating Your Software	13
5 Uninstall/Deactivate	14
6 Transferring to another computer	15
7 Re-formatting your hard drive	15
8 FAQ on Registration and Activation	16
Part IV Introduction	19
1 About AGT Topo	19
2 Opening Older Files	19
3 Getting Help	20
4 Tutorial Movies	21
5 Drawing Viewer	22
6 Screen Layout	22
7 Toolbars	23
8 SpeedMenus	23
9 Hotkeys	24
10 Undo/Redo	25
11 Command Line Recall	26
Part V Things You Need to Know	28
1 Upgrading from an earlier version	28
2 Selecting Commands	28
3 Creating, Opening and Saving Files	29
4 Automatic Backups	30
5 Opening an older ProCogo File	31
6 Zooming and Panning	32
7 Rubberbanded Lines	34
8 Show Tickmarks	35

9	Show Entity I.D.'s	35
10	Entity IDs	36
11	Redraw Command	36
12	Auto-Scale Point Labels	37
13	Text Sizes	38
14	Selecting Lines, Arcs & Symbols	39
15	Selecting from a List (Alternate Pick)	41
16	Selecting COGO Points	42
17	Selecting Text	43
18	Selecting a Tract	43
19	Selecting an image	44
20	"Pick-First" Command Sequence	46
21	Working with Google Earth and Shapefiles	46
22	Automatic Snap Mode	46
23	Advanced Snap Modes	48
24	Linetypes	48
25	Fill Pattern and Color	50
26	Scaled Fill Patterns	51
27	Grouping	52
28	Annotations - Overview	53
29	Annotations - Turning On or Off	55
30	Annotations - Configuring	56
31	Annotations - Changing	58
32	Plot Scale	58
33	Drawing Rotation	60
34	How to create a PDF file	61
35	Layers	62
	Introduction	62
	The "Current" Layer	63
	Editing Layers	63
	"ByLayer" Settings	65
	Layer Commands	67
	Set Current Layer.....	67
	Hide Selected Layers.....	68
	Show Current Layer Only.....	68
	Show All Layers.....	68
	Move objects to current layer.....	69
36	Entering Data	69
	Entering Distances	69
	Distance Units	70
	Default Distance Units	71
	Entering Coordinates	71
	Entering Latitude & Longitude	72
	Source Datum and Destination Grid.....	74

Lat/Lon Entry Format	77
Hints and Tips.....	77
Additional Info for Land Surveyors.....	79
Entering GPS Coordinates	79
Entering Angles	80
Entering COGO Point Names	81
Entering a Point Range	82
Bearing Recall	82
Distance Recall	82
Angular Arithmetic	83
Distance Arithmetic	83
Degree Symbols	83
37 Line, Curve and Coordinate Tables	84
Tables Overview	84
Displaying a Table	86
Printing a Table	86
Pasting Table into another app	87
Inserting a Table into the Drawing	87

Part VI Configuration (Preferences) 90

1 COGO	90
2 Text Output	92
3 CAD	94
4 Annotations	95
5 Line Annotation Format	97
6 COGO Points	99
7 Arrowheads	101
8 General	102
9 Color Themes	104

Part VII Working with COGO Points 107

1 Overview	107
2 ProCogo Compatibility	107
3 COGO Point Names	107
4 COGO Point Ranges	108
5 COGO Point Layer	110
6 Traverse, Inverse, and Areas	110
7 Create points from entities	111
8 Pen Down	113
9 Duplicate Lines	113

Part VIII Lines and Curves 117

1 Working with Lines	117
Draw a line using the mouse	117
Drawing Arrowheads	118
Using the Snap features	118

Drawing by bearing and distance	120
Line annotations (labels)	120
Moving an Annotation	122
Changing annotations	123
Flipping the line direction	123
Changing text size	124
Editing line properties	124
Properties.....	125
Annotations.....	126
Arrows	127
Position.....	128
2 Working with Curves	129
The Curve Command	130
Curve Data Entry Dialog	131
Drawing a Standard Curve	132
Drawing a Non-Tangent Curve	134
Non-Tangent Curve Options	136
Drawing a Curve-By-Points	137
Curve Annotations (labels)	138
Changing Annotations	138
Flipping the curve direction	139
Changing text size	139
Editing curve properties	140
Curve Parameter Dialog	144
3 Arrowheads	144
Part IX Blocks	148
1 Overview	148
2 Default Blocks	149
3 Block Attributes	150
4 Inserting a block	151
5 Editing a block instance	151
6 Creating a block definition	152
7 Creating Block Attributes	153
8 Modifying a block definition	155
9 Convert Blocks to COGO points	156
10 Importing and Exporting Blocks	156
11 Deleting block definitions	156
Part X Symbols	158
1 Point Symbols	158
2 Changing text size	159
3 Editing Symbol Properties	159
Part XI Working with Tracts	163
1 Introduction to Tracts	163

2 Prerequisites for this Section	164
3 Drawing a Tract with the mouse	164
4 Drawing by bearing and Distance	166
5 Drawing a tract using Sectional Breakdown	166
6 Drawing Curves in a Tract	169
7 Drawing a House Pad	169
8 Drawing a Filled Tract	169
9 Drawing a Road Centerline	170
10 Mirror a Tract	170
11 Continuing a Tract	171
12 The Tract Pop-up Menu	172
13 Joining objects to create a tract	172
14 Exploding a tract into objects	173
15 Inserting a Vertex in a tract	173
16 Changing text size	174
17 Editing a Tract	175
18 Moving the Tract Label	180
Part XII DTM and Contours	182
1 Overview	182
2 UNDO	182
3 Collecting XYZ Data	183
4 Locking Points	183
5 Surface Issues	184
6 Minimum Closeness	185
7 Creating a Surface	185
8 Add and Remove Points	186
9 Breaklines	187
10 Boundaries	189
11 Add and Remove Breaklines	189
12 Removing Triangles	190
13 Surface Properties	192
General Properties	192
Contour Properties	193
Smoothing and Validation	194
Custom Boundary	195
Spot Elevations	195
Volumes	196
14 Deleting a Surface	196
15 Exploding a Surface	197
16 Labeling	197

Flipping a label	198
Deleting a label	199
Deleting ALL labels	199
Moving a label	200
Hiding Labels	200
17 Changing contour elevations	200
18 Contour Properties	201
19 Independent Contours	201
20 Creating Contours from Polylines	201
Part XIII Text	204
1 Introduction to Text	204
2 The Text Command	204
3 Changing text size	205
4 Changing Text Color	205
5 Changing Text Alignment	205
6 Editing Text Properties	206
7 Arc Text	209
8 Multi-Line Text	211
Part XIV Your First Drawing	215
1 Entering a Deed	215
2 Preparation	216
3 Select the Tract Command	216
4 Enter Starting Point (P.O.B.)	217
5 Enter Leg 1	217
6 Enter a Curve (leg 2)	218
7 Enter legs 3 & 4	220
8 Automatically Close Leg 5	220
9 Saving the Drawing	221
Part XV Editing a Drawing	223
1 Undo/Redo	223
2 Edit Properties	224
3 Nudge	224
4 Move	226
5 Copy	227
6 Rotate	229
7 Scale	230
8 Delete Objects	231
9 Offset	232
10 Offset Tract	233

11	Trim to Intersection	234
12	Tract Editing Tools	235
	Join	235
	Explode	236
	Delete Tract Leg	237
13	Change Commands	237
	Annotations On/Off	239
	Flip Direction	239
	Color	240
	Linetype	240
	Linetype Scale	241
	Layer	241
	Block Scale	242
	Block Text Size	242
	Cogo Point Labels	242
	Cogo Point Text Size	244
	Cogo Point Symbol	244

Part XVI Advanced Editing Tools 246

1	Fillet	246
2	Trim	247
3	Extend	249
4	Break	250
5	Break at crossings	251

Part XVII Imaging Support 254

1	Overview	254
2	Inserting an image	255
3	Fit image to the drawing	255
4	Scaling an image	256
5	Moving, copying, & deleting images	256
6	Changing an image	257
7	Editing image properties	257

Part XVIII Tools 262

1	Snap Modes	262
	Automatic Snap	262
	Midpoint Snap	264
	Center Snap	265
	Perpendicular Snap	265
	Tangent Snap	266
	Parallel Snap	267
2	Measuring Tools	268
	Area by Points	269
	Tract Closure (and Adjustment)	269
	Distance Between Two Points	272
	Shortest Distance to a Line or Curve	273

3	Divide Line	274
4	Divide Curve	274
5	Curve and Line tables	274

Part XIX Printing 277

1	To print the text screen	277
2	To print a drawing	277
3	Print Preview	278
4	How to create a PDF file	280
5	Printing Auto-Scaled Points	281
6	Fit To Scale	281
7	Title Block	282

Part XX Importing & Exporting 284

1	Exporting to a Bitmap (Word/WordPerfect)	284
2	DXF Transfer to/from AutoCAD	285
	DXF Import	286
	DXF Import.....	286
	DXF Import (Extract Points Only).....	287
	DXF Export	288
	DXF and Arc Text.....	289
	DXF Export Options.....	290
	Civil 3D Linetypes.....	294
	Point or Range of Points.....	294
	DXF and Auto-Scaled Points.....	296
3	ASCII Files	296
4	Importing another drawing File	297
5	Import points from a ProCogo file	298
6	Exporting to a ProCogo CGX file	298
7	Exporting to Google Earth	299
8	Exporting to a shapefile	300
9	Using Google Earth and Shapefiles	301
10	Show in Google Maps	301

Part XXI MENU REFERENCE 304

1	File Menu	304
	New Command	304
	Open Command	305
	Open a ProCogo file	305
	Save Command	306
	Save As Command	307
	File Details	308
	Import	308
	Import ASCII Files.....	308
	Import Descriptions as Blocks.....	312

Import DXF File.....	315
Import DXF File (Extract Points Only).....	316
Import AGT Topo Drawing File.....	318
Import Drawing File (COGO Points Only).....	319
Export	319
To ASCII File.....	320
To DXF File.....	322
To Bitmap File.....	323
To Google KML file.....	324
To Shapefile.....	325
To Legacy ProCogo.....	326
Print Drawing	326
Print Calculations	327
Exit Command	328
2 Edit Menu	328
Undo Command	328
Redo Command	328
Cut Objects	329
Copy Objects	329
Paste to Mouse Pick	330
Paste to Original Location	330
Copy to Clipboard Command	331
Delete Objects Command	332
Delete Tract Leg Command	332
Delete ALL CAD Objects	333
Move To Front	334
Edit Properties Command	334
Move Line Label	335
Move Tract Label	335
Inserting a Vertex in a tract	335
3 View Menu	336
Zoom In Command	337
Zoom Out Command	337
Zoom Window Command	338
Zoom Selection	338
Zoom to a Point	338
Zoom Previous	339
Zoom All Command	339
Zoom Auto	340
Redraw Command	340
Show Toolbar Captions	341
4 COGO Menu	341
New Setup	342
Traverse	343
Sideshot	344
Curve Traverse	345
Inverse	346
Area	348
Traverse Close	348
Radial Stakeout	349
Station Offset - Set	349
From a baseline.....	350
From a line by points (Legacy).....	351

From an Arc by points (Legacy).....	352
Station Offset - Inverse	353
From a baseline.....	353
From a Line by points (Legacy).....	354
From an Arc by points (Legacy).....	354
Rotate Translate	355
Rotate/Translate - Legacy version.....	355
Rotate Translate - New XL Version.....	357
Set Point	360
By Coordinates.....	361
Relative to another point.....	361
Pick From Drawing.....	362
From entities.....	362
Points Management	364
Enter/Edit Points.....	364
List Points.....	365
Compare Points.....	365
Select by Description.....	366
Select All Points.....	366
Points Manager.....	367
Raise or Lower Elevation.....	368
Delete Points.....	368
Show/Hide Cogo Points	369
Show Cogo Points.....	369
Hide Cogo Points.....	369
Change Point Labels	370
5 Draw Menu	371
Tract (boundary)	372
Tract (Aliquot Parts)	373
Continue a Tract	376
Line Command	376
Curve Command	377
Curve By Points Command	378
Point Symbol Command	379
Image	380
Text Command	380
Arc Text	381
Multi-Text Command	383
Bar Scale	383
6 Blocks Menu	384
Insert a Block	385
Block Insert shortcuts	386
Explode a Block	386
Find block instances	387
Edit a Block Defintion	387
Create a New Block Definition	388
Redefine Block Definition Linework	389
Purge	390
Importing a Block Definition	390
Exporting a Block Definition	391
Importing Missing Block Definitions	392
7 Modify Menu	392
Copy	393

Move	394
Rotate	395
Scale	396
Nudge	397
Align Objects	400
Group/Ungroup	401
Scale Image	402
Fit Image	403
Move Endpoint	403
Break at crossings	404
Break	405
Trim	406
Extend	407
Trim to Intersection Command	408
Fillet	409
Offset	411
Offset Tract	412
Explode	413
Join Command	414
Change Commands	414
Annotations On/Off	415
Flip Direction	416
Change Color	416
Change Linetype	417
Linetype Scale	417
Change Layer	417
Block Scale	418
Block Text Size	418
Text Alignment	419
Cogo Point Labels	419
Cogo Point Text Size	420
Cogo Point Symbol	421
8 Tools Menu	421
Snap Modes	421
Automatic Snap Modes	422
Midpoint	424
Center	424
Perpendicular	425
Tangent	426
Parallel	427
Enter Lat/Lon	428
Measure	430
Area by points	431
Tract Closure	431
Distance between two points	434
Shortest distance to a line or curve	435
Divide Line	436
Divide Curve	436
Curve and Line Tables	436
9 Layers	437
Set current layer by object	437
Hide selected layers	437
Show current layer only	438

Show all layers	438
Move selected to current layer	438
Delete by layer	438
Edit layers	439
10 DTM Menu	441
Create a Surface	441
Create a Volume Surface	442
Add & Remove Points	443
Breaklines	444
Add Breaklines.....	444
Remove Breaklines.....	445
Remove All.....	446
Boundary	446
Add Boundary	448
Mid-Ordinate	448
Hidden Triangles.....	449
Remove Boundary.....	450
Boundary Status.....	451
Triangles	451
Hide or Unhide Triangles	451
Unhide All Triangles.....	452
Contour Labels	453
Along a Line.....	453
At a Mouse Click.....	454
Flip Labels.....	455
Delete a label.....	456
Delete All Labels.....	456
Spot Elevations	457
Insert Spot Elevations.....	457
Spot Elevation Settings.....	457
Edit a Spot Elevation.....	458
Convert to Text.....	459
DXF Export.....	460
Delete All Spot Elevations.....	460
Real-Time Elevation	460
Surface Properties	461
General Surface Properties.....	461
Contour Surface Properties.....	462
Smoothing Surface Properties.....	463
Custom Boundary.....	464
Spot Elevations.....	464
Volumes.....	465
Calculate TIN and Contours	466
Surface Utilities	466
Check for Errors.....	466
Unlock all surface points.....	467
Swap Edges.....	467
Clear Swapped Edges	468
Raise or lower a surface	469
Explode a Surface.....	469
Delete a Surface	470
Contour Utilities	470
Change Elevations.....	471
Explode a Contour Line.....	471

Convert Tract to a Contour.....	472
Export Surface Points to ASCII	473
11 Options Menu	474
Show Tickmarks	474
Show Entity I.D.'s	475
Auto-Scale Point Labels	476
Draw Annotations	476
Line Annotation Format	478
Pen Down (COGO)	479
Point Protection	479
Text Size	480
Nudge Values	482
Title Block	483
Plot Scale	484
Drawing Rotation	486
Preferences	487
Other	487
Linetype.....	488
Fill Pattern.....	489
Units	490
12 Help Menu	491
Contents	491
How to get Help	491
Activate...	492
Deactivate / Transfer	492
Maintenance	492
Statistics.....	493
Optimize grouped objects.....	493
Repair File.....	493
About...	493

Part XXII FAQ - Frequently Asked Questions 496

1 FAQ on Registration and Activation	496
2 How do I edit a leg of a tract?	497
3 How to move the tract area label	497
4 How to turn off the tract area label	497
5 How to fill a tract with a hatch pattern	498
6 How come the fill pattern does not show up?	498
7 How to draw an arrowhead	498
8 How to I move an object in front another	500
9 How to continue drawing a tract	500
10 My text does not show up in the drawing?	501
11 How do I import text from another program?	501
12 My imported text is all garbled?	501
13 Word Wrapping does not work	502
14 How do I draw a house pad?	502
15 How do I combine two drawings into one?	502

16	How to connect two adjoining lots	503
17	Why does my line go the wrong direction?	503
18	What's that funny line that follows my mouse?	504
19	How to create a setback line?	505
20	How to turn annotations on and off	505
21	Why is my curve labelled C24?	505
22	Why is my line labeled L25?	506
23	How to measure the distance of a house to a lot line	506
24	Why does my text get messed up when I change the Plot scale?	507
25	How do I position my drawing on paper?	507
26	My drawing gets cut off when I print it at the scale I want	507
27	How do I send my drawing to Word?	508
28	My text is messed up when I export to AutoCAD	508
29	Arc Text does not appear in AutoCAD	508
30	What is a bearing?	509
31	What is a non-tangent curve?	509
32	GPS Accuracy	509
33	How to establish a grid for use with Google Earth	509
34	How do I.....	511
	Enter coordinates	511
	Enter GPS Coordinates	511
	Enter a distance	512
	Entering a degree symbol	512
	Enter a house footprint	512
	Enter Chains and Links	513
	Enter Feet and Inches	513
	Enter an angle in HMS format	513
	Enter a horizontal angle or direction	514
	Calculate the area of a lot or parcel	515
	Change an entity's color or line thickness	515
	Determine the UTM Zone I am in	516

Part XXIII Troubleshooting 518

1	Dashed linetypes print out as solid lines	518
2	Network version won't allow additional users to logon	518
3	GPS Coordinates Dissappear	519
4	How come I get a negative area?	521
5	I can't select a symbol or point with the mouse	521
6	I can't select text with the mouse?	521
7	Curve is too large	522
8	Drawing command is cancelled when using Zoom Window	522
9	Text doesn't transfer correctly to AutoCAD	522
10	Some objects don't print on a printer	523

11 HP Plotter prints title block all black 523
 12 Can't see points after an ASCII Import 524
 13 Contacting Technical Support 524

Part XXIV Glossary 526

1 Acre 526
 2 Aliquot Part 526
 3 Arc Length 526
 4 Azimuth 526
 5 Backsight Reference 527
 6 Bearing 527
 7 Cadastral 528
 8 Central Angle 528
 9 Chord Bearing 528
 10 Chord Distance 528
 11 Compass Rule Adjustment 529
 12 Coordinate Table 529
 13 Curve Direction 529
 14 Curve Table 529
 15 Datum 530
 16 Deflection Angle 530
 17 Delta 530
 18 Drawing Object 530
 19 Entity 530
 20 Entity IDs 531
 21 HARN 531
 22 Height of Instrument 531
 23 Height of Target 531
 24 HMS Angle Format 531
 25 Line Table 531
 26 NAD 83 532
 27 Non-Tangent Curve 532
 28 Object 532
 29 PLSS 532
 30 Point of Beginning (POB) 533
 31 Radius 533
 32 Radial In 533
 33 Range 533
 34 Section 534
 35 Tangent Bearing 534

36	Tangent Curve	534
37	Tangent Distance	534
38	Township	535
39	WGS 84	535
40	Zenith Angle	535
Part XXV Appendices		537
1	Appendix A - Default Blocks	537
Index		543