

# **ProCogo XL 2022**

**COGO, CAD, and DTM software for Land Surveyors**

---

*by Emerald Data, Inc.*

# ProCogo XL Help

© 2007-2022 Emerald Data, Inc.

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Printed: April 2022

# Table of Contents

Foreword	0
<b>Part I Introduction</b>	<b>2</b>
<b>Part II What's New</b>	<b>5</b>
<b>Part III Notable Features</b>	<b>11</b>
<b>Part IV Help for ProCogo 2005 Users</b>	<b>19</b>
<b>Part V Installation</b>	<b>21</b>
1 Requirements .....	21
2 Installation (Single user version) .....	22
3 Installation (Network version) .....	22
4 Requesting an Activation Code .....	23
5 Activating Your Software .....	26
6 Uninstall/Deactivate .....	27
7 Transferring to another computer .....	27
8 Re-formatting your hard drive .....	28
9 FAQ on Registration and Activation .....	28
10 Network Version .....	30
Network Overview .....	30
Setting permissions for the Common Settings folder .....	30
Network Installation .....	34
Network Maintenance .....	35
Concurrent License .....	35
<b>Part VI Introduction</b>	<b>37</b>
1 About ProCogo XL .....	37
2 Opening Older Files .....	37
3 Getting Help .....	38
4 Tutorial Movies .....	40
5 Deed-Viewer .....	40
6 Screen Layout .....	40
7 Toolbars .....	41
8 SpeedMenus .....	42
9 Hotkeys .....	43
10 Text Commands .....	44
11 Undo/Redo .....	44
12 Command Line Recall .....	45

<b>Part VII Things You Need to Know</b>	<b>47</b>
1 Upgrading from an earlier version .....	47
2 Selecting Commands .....	48
3 Creating, Opening and Saving Files .....	49
4 Opening an older ProCogo File .....	51
5 Opening an AGT Survey or LotPlot file .....	51
6 Automatic Backups .....	52
7 Zooming and Panning .....	53
8 Rubberbanded Lines .....	54
9 Show Tickmarks .....	55
10 Show Entity I.D.'s .....	56
11 Entity IDs .....	56
12 Redraw Command .....	57
13 Auto-Scale Point Labels .....	57
14 Text Sizes .....	58
15 Selecting Lines, Arcs & Symbols .....	60
16 Selecting from a List (Alternate Pick) .....	61
17 Selecting COGO Points .....	63
18 Selecting Text .....	63
19 Selecting a Tract .....	64
20 Selecting an image .....	64
21 "Pick-First" Command Sequence .....	66
22 Working with Google Earth and Shapefiles .....	66
23 Automatic Snap Mode .....	66
24 Advanced Snap Modes .....	68
25 Linetypes .....	68
26 Fill Pattern and Color .....	70
27 Scaled Fill Patterns .....	71
28 Grouping .....	72
29 Annotations - Overview .....	73
30 Annotations - Turning On or Off .....	75
31 Annotations - Configuring .....	76
32 Annotations - Changing .....	78
33 Plot Scale .....	78
34 Drawing Rotation .....	80
35 How to create a PDF file .....	81
36 Editing Objects .....	82
37 Layers .....	82
Introduction .....	83

The "Current" Layer .....	83
Editing Layers .....	84
"ByLayer" settings .....	85
Layer Commands .....	87
Set Current Layer.....	87
Hide Selected Layers.....	88
Show Current Layer Only.....	88
Show All Layers.....	88
Move objects to current layer.....	89
<b>38 Entering Data .....</b>	<b>89</b>
Entering Distances .....	89
Distance Units .....	90
Default Distance Units .....	91
Entering Coordinates .....	92
Entering Latitude & Longitude .....	92
Source Datum and Destination Grid.....	94
Lat/Lon Entry Format.....	97
Hints and Tips.....	97
Additional Info for Land Surveyors.....	99
Entering GPS Coordinates .....	99
Entering Angles .....	100
Entering COGO Point Names .....	101
Entering a Point Range .....	102
Bearing Recall .....	102
Distance Recall .....	102
Angular Arithmetic .....	103
Distance Arithmetic .....	103
Degree Symbols .....	103
Capture Raw Data .....	104
<b>39 Line, Curve and Coordinate Tables .....</b>	<b>104</b>
Tables Overview .....	104
Displaying a Table .....	106
Printing a Table .....	106
Pasting Table into another app .....	107
Inserting a Table into the Drawing .....	107
 <b>Part VIII Configuration (Preferences) .....</b>	 <b>110</b>
1 COGO .....	110
2 Text Output .....	112
3 CAD .....	114
4 Annotations .....	116
5 Line Annotation Format .....	117
6 COGO Points .....	119
7 Text Commands .....	121
8 Arrowheads .....	123
9 General .....	123
10 Color Themes .....	125
 <b>Part IX Working with COGO Points .....</b>	 <b>128</b>

1 Overview .....	128
2 ProCogo Compatibility .....	128
3 COGO Point Names .....	128
4 COGO Point Ranges .....	129
5 COGO Point Layer .....	131
6 Traverse, Inverse, and Areas .....	131
7 Pen Down .....	132
8 Duplicate Lines .....	133
9 Group Files .....	134
Point Group Overview .....	134
Group File Editor .....	135
Entering group data .....	136
Checking for Errors .....	138
Running a Group File .....	139
Using group files with other commands .....	140

## Part X Lines and Curves

**143**

1 Working with Lines .....	143
Draw a line using the mouse .....	143
Drawing Arrowheads .....	144
Using the Snap features .....	144
Drawing by bearing and distance .....	146
Line annotations (labels) .....	146
Moving an Annotation .....	148
Changing annotations .....	149
Flipping the line direction .....	149
Changing text size .....	150
Linetypes .....	150
Editing line properties .....	152
Properties.....	152
Annotations.....	154
Arrows .....	155
Position.....	156
2 Working with Curves .....	157
The Curve Command .....	158
Curve Data Entry Dialog .....	159
Drawing a Standard Curve .....	160
Drawing a Non-Tangent Curve .....	162
Non-Tangent Curve Options .....	164
Drawing a Curve-By-Points .....	165
Curve Annotations (labels) .....	166
Changing Annotations .....	166
Flipping the curve direction .....	167
Changing text size .....	167
Linetypes .....	168
Editing curve properties .....	169
Curve Parameter Dialog .....	173
3 Arrowheads .....	174

<b>Part XI Blocks</b>	<b>177</b>
1 Overview .....	177
2 Default Blocks .....	178
3 Block Attributes .....	179
4 Inserting a block .....	180
5 Editing a block instance .....	180
6 Creating a block definition .....	181
7 Creating Block Attributes .....	182
8 Modifying a block definition .....	184
9 Convert Blocks to COGO points .....	185
10 Importing and Exporting Blocks .....	185
11 Deleting block definitions .....	185
<b>Part XII Symbols</b>	<b>187</b>
1 Point Symbols .....	187
2 Changing text size .....	188
3 Editing Symbol Properties .....	188
<b>Part XIII Working with Tracts</b>	<b>192</b>
1 Introduction to Tracts .....	192
2 Prerequisites for this Section .....	193
3 Drawing a Tract with the mouse .....	193
4 Drawing by bearing and Distance .....	195
5 Drawing a tract using Sectional Breakdown .....	195
6 Drawing Curves in a Tract .....	198
7 Drawing a House Pad .....	198
8 Drawing a Filled Tract .....	198
9 Drawing a Road Centerline .....	199
10 Mirror a Tract .....	199
11 Subdividing a Tract .....	200
12 Continuing a Tract .....	200
13 The Tract Pop-up Menu .....	201
14 Joining objects to create a tract .....	202
15 Exploding a tract into objects .....	202
16 Inserting a Vertex in a tract .....	202
17 Changing text size .....	203
18 Editing a Tract .....	204
19 Moving the Tract Label .....	210
20 Change Area of a Tract .....	210

Radial Side Method .....	211
Swinging Side Method .....	212
Sliding Side Method .....	213

## Part XIV DTM and Contours 216

1 Overview .....	216
2 UNDO .....	216
3 Collecting XYZ Data .....	217
4 Locking Points .....	217
5 Surface Issues .....	218
6 Minimum Closeness .....	219
7 Creating a Surface .....	220
8 Add and Remove Points .....	220
9 Breaklines .....	221
10 Boundaries .....	224
11 Add and Remove Breaklines .....	224
12 Hiding Triangles .....	225
13 Real-Time Elevation .....	227
14 Surface Properties .....	228
General Properties .....	228
Contour Properties .....	229
Smoothing and Validation .....	230
Custom Boundary .....	230
Spot Elevations .....	231
Volumes .....	232
15 Deleting a Surface .....	232
16 Exploding a Surface .....	232
17 Labeling Contours .....	233
Flipping a label .....	234
Deleting a label .....	235
Deleting ALL labels .....	235
Moving a label .....	236
Hiding Labels .....	236
18 Labeling Spot Elevations .....	236
19 Changing contour elevations .....	236
20 Contour Properties .....	237
21 Independent Contours .....	237
22 Creating Contours from Polylines .....	237
23 Volumes .....	238

## Part XV Text 241

1 Introduction to Text .....	241
2 The Text Command .....	241
3 Changing text size .....	242



4 Changing Text Color ..... 242  
 5 Changing Text Alignment ..... 242  
 6 Editing Text Properties ..... 243  
 7 Arc Text ..... 245  
 8 Multi-Line Text ..... 247

**Part XVI Your First Drawing 251**

1 Entering a Deed ..... 251  
 2 Preparation ..... 252  
 3 Select the Tract Command ..... 252  
 4 Enter Starting Point (P.O.B.) ..... 253  
 5 Enter Leg 1 ..... 253  
 6 Enter a Curve (leg 2) ..... 254  
 7 Enter legs 3 & 4 ..... 256  
 8 Automatically Close Leg 5 ..... 256  
 9 Saving the Drawing ..... 257

**Part XVII Editing a Drawing 259**

1 Undo/Redo ..... 259  
 2 Edit Properties ..... 260  
 3 Nudge ..... 260  
 4 Move ..... 262  
 5 Copy ..... 263  
 6 Rotate ..... 265  
 7 Scale ..... 266  
 8 Delete Objects ..... 267  
 9 Offset ..... 268  
 10 Offset Tract ..... 269  
 11 Trim to Intersection ..... 270  
 12 Tract Editing Tools ..... 271  
     Join ..... 271  
     Explode ..... 272  
     Delete Tract Leg ..... 273  
 13 Change Commands ..... 273  
     Annotations On/Off ..... 275  
     Flip Direction ..... 275  
     Color ..... 276  
     Linetype ..... 276  
     Layer ..... 277  
     Block Scale ..... 277  
     Block Text Size ..... 278  
     Cogo Point Labels ..... 278  
     Cogo Point Text Size ..... 279

Cogo Point Symbol .....	280
<b>Part XVIII Advanced Editing Tools</b>	<b>282</b>
1 Fillet .....	282
2 Trim .....	283
3 Extend .....	285
4 Break .....	286
5 Break at crossings .....	287
<b>Part XIX Drawing a Deed from Text</b>	<b>290</b>
1 Entering the Deed .....	290
2 Reviewing and Editing .....	291
3 Using a Scanner .....	293
4 Known Issues and Limitations .....	294
5 Troubleshooting a deed .....	295
<b>Part XX Imaging Support</b>	<b>298</b>
1 Overview .....	298
2 Inserting an image .....	299
3 Fit image to the drawing .....	299
4 Scaling an image .....	300
5 Moving, copying, & deleting images .....	300
6 Changing an image .....	301
7 Editing image properties .....	301
<b>Part XXI Tools</b>	<b>306</b>
1 Snap Modes .....	306
Automatic Snap .....	306
Midpoint Snap .....	308
Center Snap .....	309
Perpendicular Snap .....	309
Tangent Snap .....	310
Parallel Snap .....	311
2 Measuring Tools .....	312
Area by Points .....	313
Tract Overlap .....	313
Tract Closure (and Adjustment) .....	314
Distance Between Two Points .....	317
Shortest Distance to a Line or Curve .....	317
3 Divide Line .....	318
4 Divide Curve .....	318
5 Create parking spaces .....	319
6 Curve and Line tables .....	320
7 Cul-de-sac Design .....	320

Create at end of road ..... 320

Create at bend in road ..... 321

**8 Site Calculator ..... 322**

    Using the Site Calculator ..... 322

    Calculations based on lot size ..... 324

    Calculations based on number of lots ..... 324

**9 LegalAid - Create a Deed ..... 325**

**Part XXII Printing ..... 328**

1 To print the text screen ..... 328

2 To print a drawing ..... 328

3 Print Preview ..... 329

4 How to create a PDF file ..... 331

5 Printing Auto-Scaled Points ..... 331

6 Fit To Scale ..... 332

7 Title Block ..... 332

**Part XXIII Importing & Exporting ..... 335**

1 Exporting to a Bitmap (Word/WordPerfect) ..... 335

2 DXF Transfer to/from AutoCAD ..... 336

    DXF Import ..... 337

        DXF Import..... 337

        DXF Import (Extract Points Only)..... 338

    DXF Export ..... 339

        DXF and Arc Text..... 341

        DXF Export Options..... 341

        Point or Range of Points..... 344

        DXF and Auto-Scaled Points..... 346

        Civil 3D Linetypes..... 347

3 ASCII Files ..... 347

4 Importing another drawing File ..... 348

5 Import points from a drawing file ..... 349

6 Exporting to a ProCogo CGX file ..... 349

7 Exporting to Google Earth ..... 350

8 Exporting to a shapefile ..... 351

9 Using Google Earth and Shapefiles ..... 352

10 Show in Google Maps ..... 352

**Part XXIV MENU REFERENCE ..... 355**

1 File Menu ..... 355

    New Command ..... 355

    Open Command ..... 356

    Open a ProCogo file ..... 357

    Open an AGT Survey or LotPlot file ..... 357

    Save Command ..... 358

    Save As Command ..... 359

File Details .....	359
Import .....	360
Import ASCII Files.....	361
Import Descriptions as Blocks.....	364
Import DXF File.....	367
Import DXF File (Extract Points Only).....	368
Import Drawing File.....	370
Import Shapefile.....	371
Import COGO Points.....	371
Export .....	372
To ASCII File.....	372
To DXF File.....	374
To Bitmap File.....	375
To Google KML file.....	377
To Shapefile.....	378
To Legacy ProCogo.....	379
Print Drawing .....	379
Print Calculations .....	380
Exit Command .....	380
<b>2 Edit Menu .....</b>	<b>380</b>
Undo Command .....	381
Redo Command .....	381
Cut Objects .....	382
Copy Objects .....	382
Paste to Mouse Pick .....	383
Paste to Original Location .....	383
Copy Screen to Clipboard Command .....	384
Delete Objects Command .....	384
Delete Tract Leg Command .....	385
Delete ALL CAD Objects .....	386
Move To Front .....	386
Edit Properties Command .....	387
Move Line Label .....	387
Move Tract Label .....	388
Insert Tract Vertex .....	388
Point Group Editor .....	389
Point Group Editor (last file) .....	389
Select a Point Group .....	389
Lot Summary File .....	390
<b>3 View Menu .....</b>	<b>391</b>
Zoom In Command .....	391
Zoom Out Command .....	392
Zoom Window Command .....	392
Zoom Selection .....	393
Zoom to a Point .....	393
Zoom Previous .....	394
Zoom All Command .....	394
Zoom Auto .....	394
Redraw Command .....	395
Cogo Text Window .....	396
Toolbars Menu .....	396
<b>4 COGO Menu .....</b>	<b>396</b>
New Setup .....	397

<b>Traverse</b> .....	<b>398</b>
<b>Sideshot</b> .....	<b>399</b>
<b>Curve Traverse</b> .....	<b>400</b>
<b>Inverse</b> .....	<b>402</b>
<b>Area</b> .....	<b>403</b>
<b>Traverse Close</b> .....	<b>403</b>
<b>Capture Raw Data</b> .....	<b>404</b>
<b>Predetermined Area</b> .....	<b>406</b>
Swinging Side Method .....	406
Sliding Side Method .....	407
Radial Side Method .....	408
<b>Curves</b> .....	<b>409</b>
3 Point Curve .....	409
Centerline and Radius .....	410
Centerline and Tangent .....	411
Centerline and D.O.C. ....	412
<b>Stakeout</b> .....	<b>413</b>
Radial Stakeout .....	413
Circular Curve Stakeout .....	414
Vertical Curve Stakeout .....	415
<b>Station Offset - Set</b> .....	<b>417</b>
From a baseline .....	417
From a line by points (Legacy) .....	418
From an Arc by points (Legacy) .....	419
<b>Station Offset - Inverse</b> .....	<b>420</b>
From a baseline .....	420
From a Line by points (Legacy) .....	421
From an Arc by points (Legacy) .....	422
<b>Intersections</b> .....	<b>423</b>
Bearing-Bearing .....	423
Bearing-Bearing (4 point method) .....	424
Bearing-Distance .....	424
Distance-Distance .....	425
Perpendicular Intersection .....	426
Offset Intersection - Points .....	427
Offset Intersection - Lines .....	428
<b>Best Fit</b> .....	<b>429</b>
Best Fit Line .....	429
Best Fit Arc .....	429
<b>3 Point Resection</b> .....	<b>430</b>
<b>Rotate Translate</b> .....	<b>431</b>
Rotate/Translate - Legacy version .....	431
Rotate Translate - New XL Version .....	433
<b>Set Point</b> .....	<b>436</b>
By Coordinates .....	437
Relative to another point .....	437
Pick From Drawing .....	438
Pick from a Surface .....	438
From entities .....	439
<b>Points Management</b> .....	<b>441</b>
Enter/Edit Points .....	441
List Points .....	442
Compare Points .....	442
Select by Description .....	442

Select All Points.....	443
Points Manager.....	443
Raise or lower elevation.....	445
Delete Points.....	445
<b>Show/Hide Cogo Points .....</b>	<b>445</b>
Show Cogo Points.....	446
Hide Cogo Points.....	446
<b>Change Point Labels .....</b>	<b>447</b>
<b>Input Reduction .....</b>	<b>448</b>
Overview.....	448
ProCogo Compatibility.....	449
Entering and Editing Records.....	450
Set Point Record.....	451
New Setup Record.....	451
Traverse and Sideshot Records.....	452
Close To Record.....	453
Comment .....	454
GPS Point Record.....	454
Feature Codes.....	454
Checking Closure.....	457
Balance and Adjust.....	457
Print Reports.....	457
Importing Data Collector files.....	457
Capturing Raw Data.....	458
Processing a field file.....	458
Saving a field file.....	459
<b>Points Adjustment .....</b>	<b>459</b>
<b>5 Draw Menu .....</b>	<b>461</b>
<b>Tract (boundary) .....</b>	<b>461</b>
<b>Tract (Aliquot Parts) .....</b>	<b>463</b>
<b>Continue a Tract .....</b>	<b>466</b>
<b>Line Command .....</b>	<b>466</b>
<b>Curve Command .....</b>	<b>467</b>
<b>Curve By Points Command .....</b>	<b>468</b>
<b>Point Symbol Command .....</b>	<b>469</b>
<b>Image .....</b>	<b>470</b>
<b>Text Command .....</b>	<b>470</b>
<b>Arc Text .....</b>	<b>471</b>
<b>Multi-Text Command .....</b>	<b>473</b>
<b>Bar Scale .....</b>	<b>473</b>
<b>6 Blocks Menu .....</b>	<b>474</b>
<b>Insert a Block .....</b>	<b>475</b>
<b>Block Insert shortcuts .....</b>	<b>476</b>
<b>Edit a Block Definition .....</b>	<b>476</b>
<b>Explode a Block .....</b>	<b>477</b>
<b>Find block instances .....</b>	<b>477</b>
<b>Create a New Block Definition .....</b>	<b>478</b>
<b>Redefine Block Definition Linework .....</b>	<b>479</b>
<b>Purge .....</b>	<b>480</b>
<b>Convert Blocks to COGO points .....</b>	<b>480</b>
<b>Importing a Block Definition .....</b>	<b>481</b>
<b>Exporting a Block Definition .....</b>	<b>482</b>
<b>Importing Missing Block Definitions .....</b>	<b>482</b>

<b>7 Modify Menu</b> .....	<b>482</b>
Copy .....	483
Move .....	484
Rotate .....	485
Scale .....	486
Nudge .....	487
Align Objects .....	490
Group/Ungroup .....	491
Scale Image .....	492
Fit Image .....	493
Move Endpoint .....	493
Break at Crossings .....	494
Break .....	495
Trim .....	496
Extend .....	497
Trim to Intersection Command .....	498
Fillet .....	499
Offset .....	501
Offset Tract .....	502
Explode .....	503
Join Command .....	504
Change Commands .....	504
Annotations On/Off .....	505
Flip Direction.....	506
Change Color.....	506
Change Linetype.....	507
Linetype Scale.....	507
Change Layer.....	508
Text Size.....	508
Text Alignment.....	509
Block Scale.....	509
Block Text Size.....	509
Cogo Point Labels.....	510
Cogo Point Symbol.....	511
<b>8 Tools Menu</b> .....	<b>512</b>
<b>Snap Modes</b> .....	<b>512</b>
Automatic Snap Modes.....	512
Midpoint.....	514
Center .....	515
Perpendicular.....	516
Tangent.....	517
Parallel .....	518
<b>Enter Lat/Lon</b> .....	<b>519</b>
<b>Measure</b> .....	<b>521</b>
Area by points.....	522
Tract Overlap.....	522
Tract Closure.....	523
Distance between two points.....	526
Shortest distance to a line or curve.....	526
<b>Divide Line</b> .....	<b>527</b>
<b>Divide Curve</b> .....	<b>527</b>
<b>Subdivide a Tract</b> .....	<b>528</b>
Subdivide Tract by a Line.....	528

Subdivide Tract by Parts.....	529
<b>Design a cul-de-sac</b> .....	<b>531</b>
At end of line or curve.....	531
At corner of two lines .....	532
<b>Create Parking Spaces</b> .....	<b>532</b>
<b>Curve and Line Tables</b> .....	<b>533</b>
<b>Site Calculator</b> .....	<b>534</b>
<b>Draw a Deed from text</b> .....	<b>535</b>
<b>Create a Deed</b> .....	<b>536</b>
<b>9 Layers</b> .....	<b>538</b>
Set current layer by object .....	538
Hide selected layers .....	538
Show current layer only .....	539
Show all layers .....	539
Move selected to current layer .....	539
Move to a new layer .....	539
Delete by layer .....	540
Edit layers .....	540
<b>10 DTM Menu</b> .....	<b>542</b>
<b>Create a Surface</b> .....	<b>543</b>
<b>Create a Volume Surface</b> .....	<b>544</b>
<b>Add &amp; Remove Points</b> .....	<b>544</b>
<b>Breaklines</b> .....	<b>545</b>
Add Breaklines.....	545
Remove Breaklines.....	546
Remove All.....	547
<b>Boundary</b> .....	<b>547</b>
Add Boundary .....	548
Mid-Ordinate .....	549
Hidden Triangles.....	550
Remove Boundary .....	551
Boundary Status.....	552
<b>Triangles</b> .....	<b>552</b>
Hide or Unhide Triangles.....	552
Unhide All Triangles.....	553
<b>Contour Labels</b> .....	<b>554</b>
Along a Line.....	554
At a Mouse Click.....	555
Flip Labels.....	556
Delete a label.....	557
Delete All Labels.....	557
<b>Spot Elevations</b> .....	<b>558</b>
Insert Spot Elevations.....	558
Spot Elevation Settings.....	558
Edit a Spot Elevation.....	559
Convert to Text.....	560
DXF Export.....	561
Delete All Spot Elevations.....	561
<b>Real-Time Elevation</b> .....	<b>561</b>
<b>Surface Properties</b> .....	<b>562</b>
General Surface Properties.....	563
Contour Surface Properties.....	564
Smoothing Surface Properties.....	565



Custom Boundary.....	565
Spot Elevations.....	566
Volumes.....	566
<b>Calculate TIN and Contours .....</b>	<b>567</b>
<b>Recalculate .....</b>	<b>567</b>
<b>Recalculate All .....</b>	<b>567</b>
<b>Surface Utilities .....</b>	<b>568</b>
Check for Errors.....	568
Unlock all surface points.....	568
Swap Edges.....	569
Clear Swapped Edges.....	570
Raise or lower a surface.....	571
Explode a Surface.....	571
Delete a Surface.....	572
<b>Contour Utilities .....</b>	<b>572</b>
Change Elevations.....	573
Explode a Contour Line.....	573
Convert Tract to a Contour.....	574
<b>Export Surface Points to ASCII .....</b>	<b>575</b>
<b>11 Options Menu .....</b>	<b>576</b>
<b>Show Tickmarks .....</b>	<b>576</b>
<b>Show Entity I.D.'s .....</b>	<b>577</b>
<b>Auto-Scale Point Labels .....</b>	<b>578</b>
<b>Draw Annotations .....</b>	<b>578</b>
<b>Line Annotation Format .....</b>	<b>580</b>
<b>Pen Down (COGO) .....</b>	<b>581</b>
<b>Point Protection .....</b>	<b>581</b>
<b>Text Size .....</b>	<b>583</b>
<b>Nudge Values .....</b>	<b>584</b>
<b>Title Block .....</b>	<b>585</b>
<b>Plot Scale .....</b>	<b>586</b>
<b>Drawing Rotation .....</b>	<b>588</b>
<b>Zoom Settings .....</b>	<b>589</b>
<b>Project Settings .....</b>	<b>589</b>
<b>Preferences .....</b>	<b>591</b>
<b>Other .....</b>	<b>591</b>
Linetype.....	591
Fill Pattern.....	593
Units .....	594
<b>12 Help Menu .....</b>	<b>595</b>
<b>Contents .....</b>	<b>595</b>
<b>Help for ProCogo 2005 Users .....</b>	<b>595</b>
<b>How to get Help .....</b>	<b>595</b>
<b>Activate... .....</b>	<b>595</b>
<b>Deactivate / Transfer .....</b>	<b>596</b>
<b>Maintenance .....</b>	<b>596</b>
Statistics.....	596
Optimize grouped objects.....	597
Repair File.....	597
<b>About... .....</b>	<b>597</b>
<b>Part XXV FAQ - Frequently Asked Questions .....</b>	<b>599</b>
<b>1 FAQ on Registration and Activation .....</b>	<b>599</b>

2	How do I edit a leg of a tract? .....	600
3	How to move the tract area label .....	600
4	How to turn off the tract area label .....	600
5	How to fill a tract with a hatch pattern .....	601
6	How come the fill pattern does not show up? .....	601
7	How to draw an arrowhead .....	601
8	How to I move an object in front another .....	603
9	How to continue drawing a tract .....	603
10	My text does not show up in the drawing? .....	604
11	How do I import text from another program? .....	604
12	My imported text is all garbled? .....	604
13	Word Wrapping does not work .....	605
14	How do I draw a house pad? .....	605
15	How do I combine two drawings into one? .....	605
16	How to connect two adjoining lots .....	606
17	Why does my line go the wrong direction? .....	606
18	What's that funny line that follows my mouse? .....	607
19	How to create a setback line? .....	608
20	How to turn annotations on and off .....	608
21	Why is my curve labelled C24? .....	608
22	Why is my line labeled L25? .....	609
23	How to measure the distance of a house to a lot line .....	609
24	Why does my text get messed up when I change the Plot scale? .....	610
25	How do I position my drawing on paper? .....	610
26	My drawing gets cut off when I print it at the scale I want .....	610
27	How do I send my drawing to Word? .....	611
28	My text is messed up when I export to AutoCAD .....	611
29	Arc Text does not appear in AutoCAD .....	611
30	What is a bearing? .....	612
31	What is a non-tangent curve? .....	612
32	GPS Accuracy .....	612
33	How to establish a grid for use with Google Earth .....	612
34	How do I..... .....	614
	Enter coordinates .....	614
	Enter GPS Coordinates .....	614
	Enter a distance .....	615
	Entering a degree symbol .....	615
	Enter a house footprint .....	615
	Enter Chains and Links .....	616
	Enter Feet and Inches .....	616
	Enter an angle in HMS format .....	616
	Enter a horizontal angle or direction .....	617

Calculate the area of a lot or parcel ..... 618  
 Change an entity's color or line thickness ..... 618  
 Determine the UTM Zone I am in ..... 619

**Part XXVI Troubleshooting 621**

1 Dashed linetypes print out as solid lines ..... 621  
 2 Network version won't allow additional users to logon ..... 621  
 3 GPS Coordinates Dissappear ..... 622  
 4 How come I get a negative area? ..... 624  
 5 I can't select a symbol or point with the mouse ..... 624  
 6 I can't select text with the mouse? ..... 624  
 7 Curve is too large ..... 625  
 8 Drawing command is cancelled when using Zoom Window ..... 625  
 9 Text does'nt transfer correctly to AutoCAD ..... 625  
 10 Some objects don't print on a printer ..... 626  
 11 HP Plotter prints title block all black ..... 626  
 12 Can't see points after an ASCII Import ..... 627  
 13 Contacting Technical Support ..... 627

**Part XXVII Glossary 629**

1 Acre ..... 629  
 2 Aliquot Part ..... 629  
 3 Arc Length ..... 629  
 4 Azimuth ..... 629  
 5 Backsight Reference ..... 630  
 6 Bearing ..... 630  
 7 Cadastral ..... 631  
 8 Central Angle ..... 631  
 9 Chord Bearing ..... 631  
 10 Chord Distance ..... 631  
 11 Compass Rule Adjustment ..... 632  
 12 Coordinate Table ..... 632  
 13 Curve Direction ..... 632  
 14 Curve Table ..... 632  
 15 Datum ..... 633  
 16 Deflection Angle ..... 633  
 17 Delta ..... 633  
 18 Drawing Object ..... 633  
 19 Entity ..... 633  
 20 Entity IDs ..... 634  
 21 HARN ..... 634

22	Height of Instrument .....	634
23	Height of Target .....	634
24	HMS Angle Format .....	634
25	Line Table .....	634
26	NAD 83 .....	635
27	Non-Tangent Curve .....	635
28	Object .....	635
29	PLSS .....	635
30	Point of Beginning (POB) .....	636
31	Radius .....	636
32	Radial In .....	636
33	Range .....	636
34	Section .....	637
35	Tangent Bearing .....	637
36	Tangent Curve .....	637
37	Tangent Distance .....	637
38	Township .....	638
39	WGS 84 .....	638
40	Zenith Angle .....	638
<b>Part XXVIII Appendices</b>		<b>640</b>
1	Appendix A - Default Blocks .....	640
<b>Index</b>		<b>646</b>